IS-80-M1

## **Series Governor 80-M1**

## Ball Cock and Thermal Expansion Relief Valve

#### **CAUTION:**

You are required to thoroughly read all installation instructions and product safety information before beginning the installation of this product. FAILURE TO COMPLY WITH PROPER INSTALLATION AND MAINTENANCE INSTRUCTIONS COULD RESULT IN PRODUCT FAILURE WHICH CAN CAUSE PROPERTY DAMAGE, AND/OR PERSONAL INJURY. Watts is not responsible for damages resulting from improper installation and/or maintenance.

Local building or plumbing codes may require modifications to the information provided. You are required to consult the local building and plumbing codes prior to installation. If this information is not consistent with local building or plumbing codes, the local codes should be followed.

Need for Periodic Inspection/Maintenance: This product must be tested periodically in compliance with local codes, but at least once per year or more as service conditions warrant. Corrosive water conditions, and/or unauthorized adjustments or repair could render the product ineffective for the service intended. Regular checking and cleaning of the product's internal components helps assure maximum life and proper product function.

#### **Installation Instructions**

The Watts Governor 80-M1 is for both existing and new installations providing an auxiliary relief feature, a safe antisiphon vacuum breaker and truly dependable fill valve assembly.

The non-adjustable thermal expansion relief valve is set standardly at 80psi (552 kPa), 100psi (6.9 bar), or 125psi (8.6 bar) with a maximum operating temperature of 110°F (135°C) to meet existing codes. The Watts Governor 80 is available in three

"C.L."

"Governor 80-M1"

"W.O.L."

Thermal Expansion Relief Valve Tube

standard lengths: 10", 11½" or 12½". Be sure maximum water level mark is even with or above the top of the overflow tube.

**Important:** This is a control device that limits system pressure in the event of thermal expansion. It does not take the place of any safety relief devices that are required by code. If the incoming water pressure exceeds 65psi (448 kPa), a pressure reducing valve must be installed at the service entrance. If the system already contains a pressure reducing valve, be sure it is set no higher than 65psi (448 kPa) under a no-flow condition.

### Installation Instructions For The Governor 80-M1.

- 1. Shut off water supply valve. Drain tank.
- 2. Unscrew water supply line coupling nut from ball cock shank beneath tank. (A small amount of water will drain out.) Slide coupling nut down water supply line to be reused. If replacement is necessary, a new coupling nut is provided. (See reverse side.)
- **3.** Unscrew and remove lock nut from ball cock shank. Remove old ballcock assembly.
- 4. Thread float rod into lever on top of the Governor 80-M1. (If your tank requires a longer threaded float rod, obtain one or reuse float rod from old ball cock.) Thread the float onto the float rod.
- 5. Insert shank through hole in bottom of tank. Position ball cock inside tank so rod and float do not rub against flush valve or back of tank. Hold ball cock steady inside the tank while threading

#### **Typical Water Closet**

**C.L.** = Critical level established **W.O.L.** = Water overflow level



new lock nut onto shank beneath tank. Turn lock nut until hand-tight, then snug ½—turn with pliers. **Do Not Overtighten**.

- 6. Reattach coupling nut washer from the end of water supply line or install new coupling nut washer provided. Turn snug ½ – turn with pliers. Do Not Overtighten.
- 7. Attach refill tube provided onto connector of ball cock. Then clip the opposite end of refill tube onto the overflow tube of flush valve so that the end of refill tube is pointing into the overflow tube.
- 8. Your new ball cock is ready to use. Turn on water. Examine for leaks. With no leaks apparent, flush toilet and check for proper water level of tank when full.

Sometimes slight adjustments have to be made to maintain the proper water level in the tank. This can be done by slightly bending the float rod. Bend rod upward to allow more water into the tank or bend downward to reduce water level.

#### Installation Instructions For Governor 80-M1 Service Kit.

- **1.** Shut off water supply valve and flush toilet.
- Unscrew cap ring (counterclockwise). Slide ring over lever assembly and rest it on float. Remove top works (cap, lever assembly, plunger and both diaphragms).
- 3. Remove and replace relief valve.

**Note:** Do not use Teflon® tape or pipe dope. Do not overtighten.

**4.** Insert new diaphragms and reassemble top works.


**Note:** Position lever assembly so that notched parts are aligned, before attaching cap ring.

**5.** Turn on water. Examine for leaks and proper water level.

**Repair Kit:** RK GOV80-D **Ordering Code:** 0721478

Consists of: 1 - Upper diaphragm

1 - Lower diaphragm 1 - Relief valve #32-80

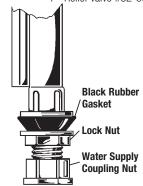

#### **CALIFORNIA PROPOSITION 65 WARNING**

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (California law requires this warning to be given to customers in the State of California.)

For more information: www.watts.com/prop65

**Limited Warranty:** Watts Regulator Co. (the "Company") warrants each product to be free from defects in material and workmanship under normal usage for a period of one year from the date of original shipment. In the event of such defects within the warranty period, the Company will, at its option, replace or recondition the product without charge.

THE WARRANTY SET FORTH HEREIN IS GIVEN EXPRESSLY AND IS THE ONLY WARRANTY GIVEN BY THE COMPANY WITH RESPECT TO THE PRODUCT. THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED. THE COMPANY HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and the Company shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labor charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, or any other circumstances over which the Company has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

Some States do not allow limitations on how long an implied warranty lasts, and some States do not allow the exclusion or limitation of incidental or consequential damages. Therefore the above limitations may not apply to you. This Limited Warranty gives you specific legal rights, and you may have other rights that vary from State to State. You should consult applicable state laws to determine your rights. SO FAR AS IS CONSISTENT WITH APPLICABLE STATE LAW, ANY IMPLIED WARRANTIES THAT MAY NOT BE DISCLAIMED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL SHIPMENT.



ISO 9001-2008

A Watts Water Technologies Company USA: No. Andover, MA • Tel: (978) 688-1811 • Fax: (978) 794-1848 • www.watts.com

**Canada:** Burlington, ON • Tel: (905) 332-4090 • Fax: (905) 332-7068 • www.wattscanada.ca

IS-80-M1 1140 EDP# 1915307 © 2011 Watts

Ball Cock and Thermal Expansion

Relief Valve

### **CAUTION:**

PERSONAL INJURY. Watts is not responsible for CAN CAUSE PROPERTY DAMAGE, AND/OR COULD RESULT IN PRODUCT FAILURE WHICH LATION AND MAINTENANCE INSTRUCTIONS FAILURE TO COMPLY WITH PROPER INSTALbefore beginning the installation of this product. tion instructions and product safety information You are required to thoroughly read all installa-

or maintenance. damages resulting from improper installation and/

the local codes should be followed. consistent with local building or plumbing codes, codes prior to installation. If this information is not required to consult the local building and plumbing modifications to the information provided. You are Local building or plumbing codes may require

Need for Periodic Inspection/Maintenance:

product function. ponents helps assure maximum life and proper ing and cleaning of the product's internal comeffective for the service intended. Regular checkadjustments or repair could render the product in-Corrosive water conditions, and/or unauthorized per year or more as service conditions warrant. compliance with local codes, but at least once This product must be tested periodically in

### Installation Instructions

truly dependable fill valve assembly. feature, a safe antisiphon vacuum breaker and and new installations providing an auxiliary relief The Watts Governor 80-M1 is for both existing

is set standardly at 80psi (552 kPa), 100psi (6.9 The non-adjustable thermal expansion relief valve

codes. The Watts Governor 80 is available in three ing temperature of 1 10°F (135°C) to meet existing bar), or 125psi (8.6 bar) with a maximum operat-

aduT Relief Valve Overflow Expansion 151/511 Lhermal 10 ո%եե Float Ball 10" ".J.O.W." "Governor 80-M1"



**5eries Governor 80-M1** 

maximum water level mark is even with or standard lengths: 10", 111/2" or 121/2". **Be sure** 

Important: This is a control device that limits above the top of the overflow tube.

than 65psi (448 kPa) under a no-flow condition. pressure reducing valve, be sure it is set no higher service entrance. If the system already contains a pressure reducing valve must be installed at the ing water pressure exceeds 65psi (448 kPa), a devices that are required by code. If the incom-It does not take the place of any safety relief system pressure in the event of thermal expansion.

 
## Installation Instructions For The Governor

1. Shut off water supply valve. Drain tank.

ball cock shank beneath tank. (A small amount 2. Unscrew water supply line coupling nut from

replacement is to be reused. If water supply line nwob tun gnild out.) Slide couof water will drain





coupling nut is provided. (See reverse side.)

shank. Remove old ballcock assembly. 3. Unscrew and remove lock nut from ball cock

from old ball cock.) Thread the float onto the threaded float rod, obtain one or reuse float rod Governor 80-M1. (If your tank requires a longer 4. Thread float rod into lever on top of the

5. Insert shank through hole in bottom of tank.

psyl cock ageady inside the tank while threading not rub against flush valve or back of tank. Hold Position ball cock inside tank so rod and float do

Typical Water Closet

**W.O.L.** = Water overflow level  $\mathbf{C.L.} = \text{Critical level established}$ 

# SLLVM

4. Insert new diaphragms and reassemble top

Note: Do not use Teflon® tape or pipe dope. Do

Remove top works (cap, lever assembly,

2. Unscrew cap ring (counterclockwise). Slide

1. Shut off water supply valve and flush toilet.

Installation Instructions For Governor 80-

rod upward to allow more water into the tank or

can be done by slightly bending the float rod. Bend

to maintain the proper water level in the tank. This

ent, flush toilet and check for proper water level

the overflow tube of flush valve so that the end of

cock. Then clip the opposite end of refill tube onto

washer provided. Turn snug 1/4 – turn with pli-

water supply line or install new coupling nut

6. Reattach coupling nut washer from the end of

-ilq ntin mut −¼ guns nəht, their basıd litru tun new lock nut onto shank beneath tank. Turn lock

water. Examine for leaks. With no leaks appar-

8. Your new ball cock is ready to use. Turn on

refill tube is pointing into the overflow tube.

7. Attach refill tube provided onto connector of ball

ers. Do Not Overtighten.

ers. Do Not Overtighten.

Sometimes slight adjustments have to be made

bend downward to reduce water level.

ring over lever assembly and rest it on float.

Remove and replace relief valve.

plunger and both diaphragms).

1SO 9001-2008

CERTIFIED

A Watts Water Technologies Company USA: No. Andover, MA • Tel: (978) 688-1811 • Fax: (978) 794-1848 • www.watts.com

FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL

WARRANTIES THAT MAY NOT BE DISCLAIMED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND

applicable state laws to determine your rights. SO FAR AS IS CONSISTENT WITH APPLICABLE STATE LAW, ANY IMPLIED

Warranty gives you specific legal rights, and you may have other rights that vary from State to State. You should consult

or limitation of incidental or consequential damages. Therefore the above limitations may not apply to you. This Limited

Some States do not allow limitations on how long an implied warranty lasts, and some States do not allow the exclusion

This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or

damage from adverse water conditions, chemical, or any other circumstances over which the Company has no control.

work properly, other costs resulting from labor charges, delays, vandalism, negligence, fouling caused by foreign material,

without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not

of warranty, and the Company shall not be responsible for any incidental, special or consequential damages, including

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach

COMPANY HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT

WITH RESPECT TO THE PRODUCT. THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED. THE

THE WARRANTY SET FORTH HEREIN IS GIVEN EXPRESSLY AND IS THE ONLY WARRANTY GIVEN BY THE COMPANY

workmanship under normal usage for a period of one year from the date of original shipment. In the event of such defects

Limited Warranty: Watts Regulator Co. (the "Company") warrants each product to be free from defects in material and

LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

within the warranty period, the Company will, at its option, replace or recondition the product without charge.

Canada: Burlington, ON • Tel: (905) 332-4090 • Fax: (905) 332-7068 • www.wattscanada.ca

For more information: www watts com/prop65

(California law requires this warning to be given

and birth defects or other reproductive harm.

known to the State of California to cause cancer

WARNING: This product contains chemicals

CALIFORNIA PROPOSITION 65 WARNING

Coupling Mut

Water Supply

Black Rubber

Lock Mut

Gasket

1 - Relief valve #32-80

1 - Lower diaphragm

J - Upper diaphragm

0721478

5. Turn on water. Examine for leaks and proper

Note: Position lever assembly so that notched

before attaching cap ring.

parts are aligned,

**BK CON80-D** 

Consists of:

Repair Kit:

Ordering Code:

water level.

to customers in the State of California.)

© 2011 Watts EDP# 1915307

0711 IM-08-SI

afteration of the product.

not overtighten.

M1 Service Kit.

of tank when full.