### For Residential and Commercial Snow Melt Applications

Job Name	Contractor
Job Location	Approval
Engineer	Contractor's P.O. No.
Approval	Representative
1001014ii	1 topi coci itative

## **PM-2B Sensor/Controller**

#### Remote snow/ice sensor

The PM-2B is a multi-voltage, self contained temperature, snow and ice sensing control. Each PM-2B can be set to operate with either 120 , 208, or 240 VAC and can provide up to 30 amps of service to the load. The integrated snow sensor is heated to allow for snow, ice, or freezing rain to melt, allowing proper detection of environmental conditions.

#### **Specifications**

	100 - 120 VAC		
Supply Voltage	200 - 240 VAC		
Maximum Amperage	30A		
Maximum Amperage	JUA		
Trigger Temperature Range (TT)	34°F to 44°F (1°C to 6.5°C)		
Configuration Modes	Snow Only		
	Rain Only		
	Snow or Rain		
Delay Settings (post melting)	30 to 90 minutes		
	Prevents system operation when		
Low Temperature Cutoff (LTC)	Ambient Temperature (AT) is		
, ,	below 15°F (9.5°C)		
Operation Modes	Automatic		
	Standby/Reset		
_	Manual		

#### Installation

The PM-2B must be installed in a location that exposes the moisture grid to a clear view of the sky and any precipitation. The unit should not be mounted directly under eaves, overhangs, or other obstructions that can block precipitation from reaching the moisture grid.


Do not install the sensor close to the ground, or any other location, that can cause the sensor to be buried in snow.

Mount the PM-2B outdoors, away from furnace vents, dryer vents, and other sources of heat. The PM-2B can be mounted to a free-standing conduit or by using the mounting holes in each corner of the enclosure. Do not drill holes in the enclosure.

Wire the controller in accordance to the provided schematics.

#### **△** CAUTION

This Engineering Sheet is not intended to provide full installation instructions and safety information. In order to avoid property damage or injury, please refer to the complete installation manual and product safety information provided with the product.

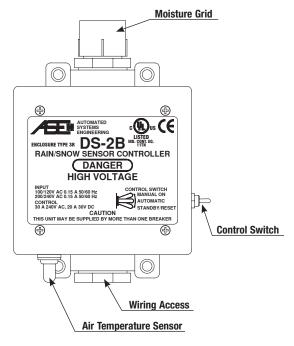

PM-2B provides integrated air and moisture detection within a rainproof and ice-resistant enclosure.


#### Standards and Listings






√	Description	Dimensions	Order #
	PM-2B Sensor/Control	5" x 7" x 3"	81011699



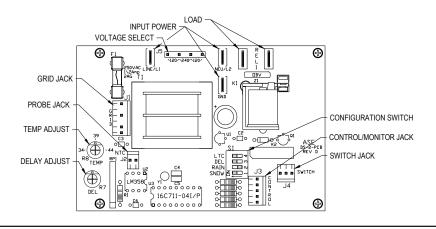

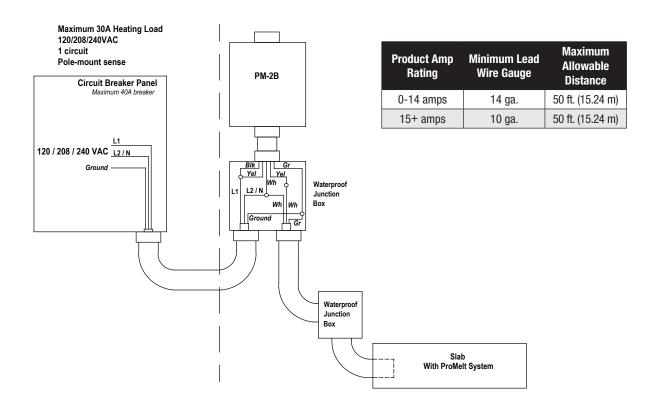

Recommended Switch Settings								
Function	Trigger	LTC	DEL	RAIN	SNOW			
Snow sensor w/o LTC	TT>AT	0FF	0FF	0FF	ON			
Snow sensor w/LTC	TT>AT>15°F (9.5°C)	ON	0FF	0FF	ON			
Snow controller w/o LTC	TT>AT	0FF	ON	0FF	ON			
Snow controller w/LTC	TT>AT>15°F (9.5°C)	ON	ON	0FF	ON			

Do Not set the Rain switch to "ON". Possible overheating of the snow melt cables may result.

# ▲ WARNING: General Safety Instructions 1. THIS UNIT SHOULD BE INSTALLED ONLY BY OUALIFIED PERSONNEL!

- 2. Disconnect all power from the control, or any associated equipment, before opening the front cover plate.
- Confirm power selection jumpers are properly set prior to applying power.
- To avoid fire hazard, replace fuse only with 2 Amp 32 V or 250 V 3AG fast acting fuse.
- Do not drill holes through the electrical enclosure for mounting. Mount the control to a free-standing conduit or via the pre-determined mounting holes.
- 6. Ensure front cover gasket is properly installed when replacing cover.



A WATTS Brand

**USA:** T: (888) 432-8932 • F: (417) 831-4067 • SunTouch.com

Canada: T: (905) 332-4090 • F: (905) 332-7068

Latin America: T: (52) 81-1001-8600 • SunTouch.com

© 2019 SunTouch