Quick Start Guide for SunStat™ Programmable Controls

1. Turn SunStat On
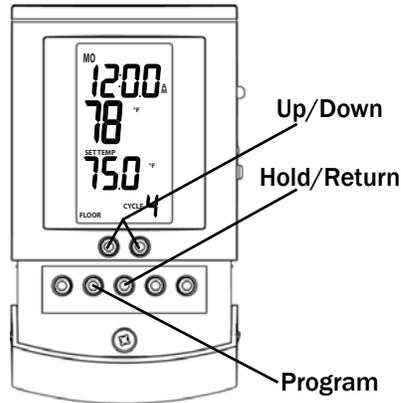
On/Off

2. Set Time & Day

Up/Down
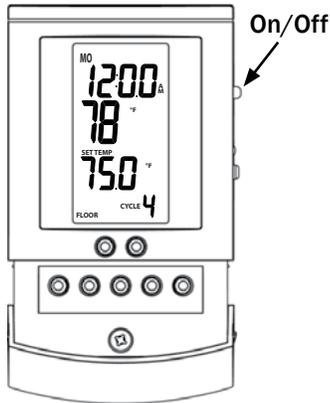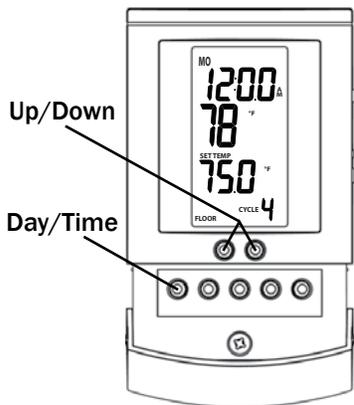
Day/Time

- Press Day/Time and hold for 1 second (hour should blink).
- Press Up or Down arrow to adjust time.
- Press Day/Time (minutes should blink).
- Press Up or Down to adjust minutes.
- Press Day/Time button (day should blink).
- Press Up or Down to adjust day.
- Press Hold/Return to exit.

3. Choose Pre-Set Schedule

Up/Down

Hold/Return

Program

- Press and hold the Program button for 1 second.
- Press Up or Down arrows to cycle through each of the presets (U1*, P1, P2, P3, and P4 - *see below*).
- Press Hold/Return, or wait 15 seconds to select schedule.
- Thermostat will now display selected schedule at bottom right of screen.

P1 (Early Riser)

Cycle	1	2	3	4
Mon-Fri	5:00 am 82 F	7:00 am 74 F	5:00 pm 82 F	10:00 pm 74 F
Weekend	5:00 am 82 F	9:00 am 74 F	5:00 pm 82 F	10:00 pm 74 F

P2 (Longer Day)

| Cycle	1	2	3	4
Mon-Fri	5:00 am 82 F	8:00 am 74 F	6:00 pm 82 F	11:00 pm 74 F
Weekend	6:00 am 82 F	9:00 am 74 F	5:00 pm 82 F	11:00 pm 74 F

P3 (At home during the day)

Cycle	1	2	3	4
Mon-Fri	6:00 am 82 F	8:00 am 79 F	6:00 pm 82 F	10:00 pm 75 F
Weekend	6:00 am 82 F	9:00 am 79 F	6:00 pm 82 F	10:00 pm 75 F

P4 (Take the chill off)

Cycle	1	2	3	4
Mon-Fri	6:00 am 75 F	9:00 am 70 F	6:00 pm 75 F	10:00 pm 70 F
Weekend	7:00 am 75 F	10:00 am 70 F	6:00 pm 75 F	10:00 pm 70 F

* U1 user schedule is customizable. Please see full manual for details.

OPTIONAL

Up/Down
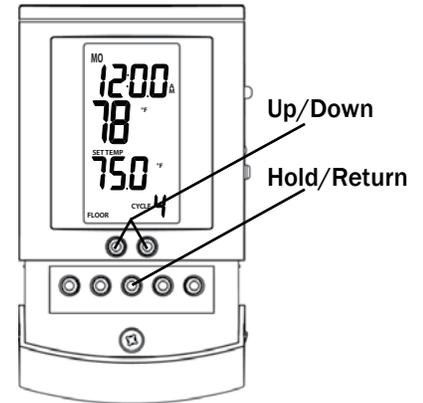
Hold/Return

### To set a temperature manually, overriding the programming

- Adjust temperature set point with Up or Down arrows.
- Press and hold the Hold/Return button for 2 seconds until "HOLD" is displayed.
- The set point temperature will override the pre-set schedule. To go back to a pre-set schedule, see Step 3.

If you need the full instructions, please visit **SunTouch.com** and click on the literature link.
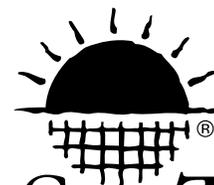
SunTouch®
Electric Floor Heating & Snow Melting