

CrimpAll™ Tool Kit




WattsRadiant
Floor Heating & Snowmelting


A Watts Industries Company

3131 W. Chestnut Expwy. Springfield, MO 65802
800-276-2419 (toll-free U.S./Canada) 417-864-6108 (phone)
417-864-8161 (fax) www.wattsradiant.com

CrimpAll Tool Kit Components

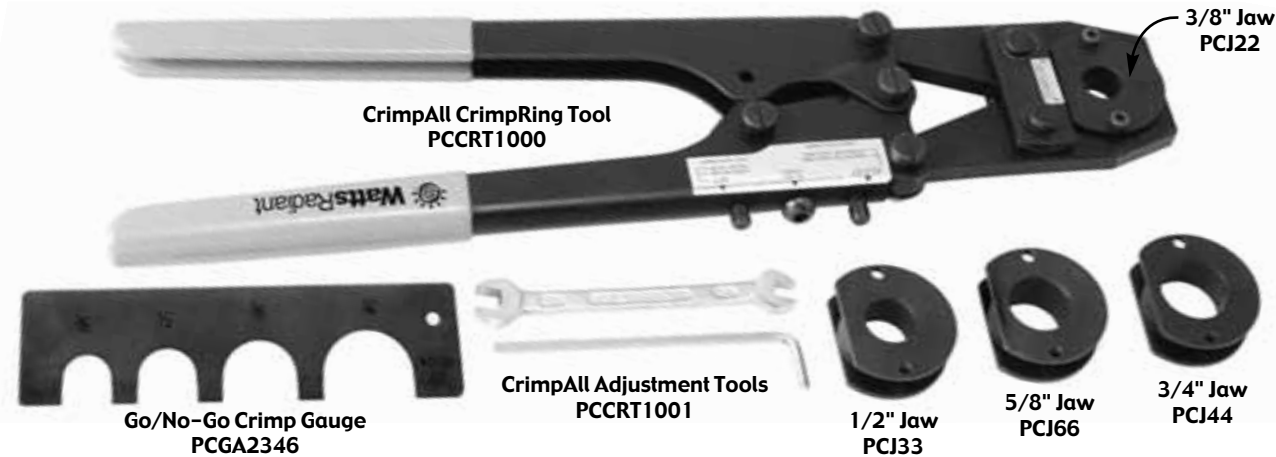

CrimpAll Tool Adjustment

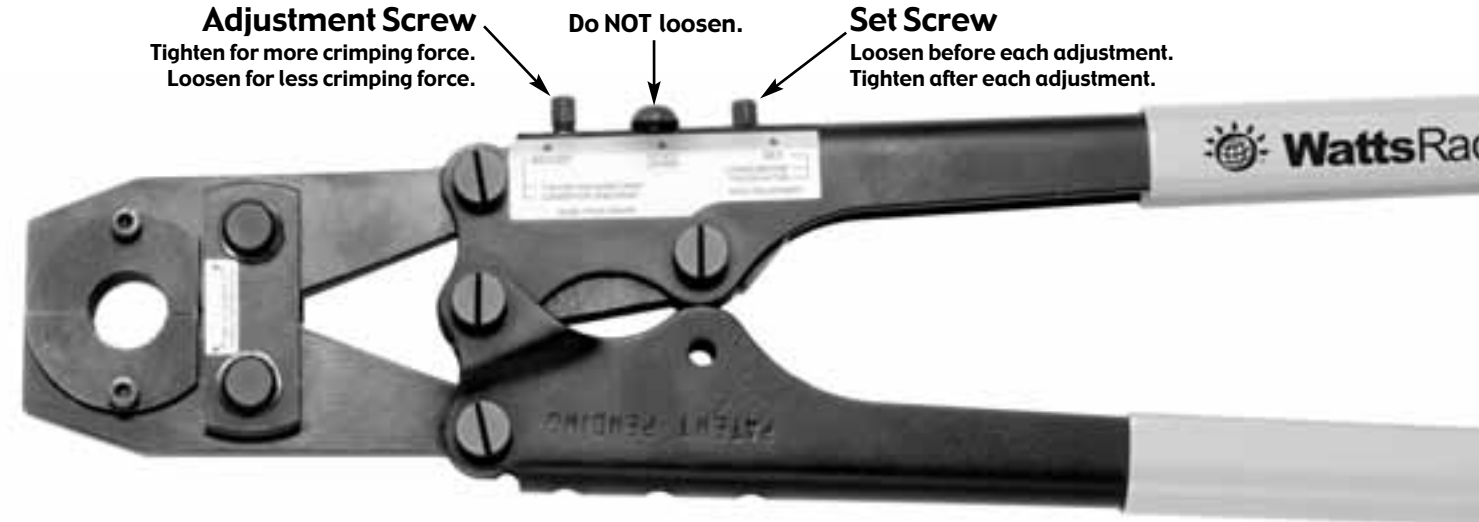

CrimpAll Jaw Installation

1. Loosen the screws.
2. Remove crimping jaws.
3. Insert new crimping jaw set.
4. Tighten the screws with the tool closed, and you're ready to crimp.


Extra jaw screws included in kit.



Using the Go/No-Go Gauge


NO GO!

The CrimpRing is not compressed enough, and will not slide into the "GO" slot of the gauge.

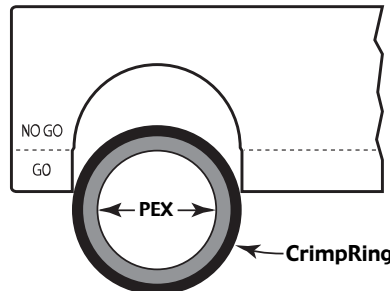

GO.

The CrimpRing slides into the "GO" slot, but stops at the shoulders in the "GO" slot.

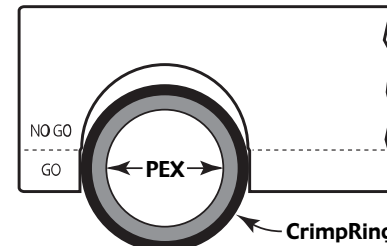

NO GO!

The CrimpRing is compressed too small, and slides all the way into the "NO GO" slot.

